



FUNTRONIX

SCORE-N-TIME™

Wireless Referee Wrist Remote Keypad

For use with the following scoreboards:

SNT-130M
SNT-130MP

SNT-230M
SNT-230MP

SNT-300F
SNT-340F

SNT-800M
SNT-800F

SNT-140
SNT-140P

SNT-300M
SNT-340M

SNT-440
SNT-440P

Revision: October 27, 2015



WARNING:

CHOKING HAZARD - Small Parts.
Not for children under 3 years.

The contents of the package may contain parts and packing materials that can be hazardous to children under 3 years old. These components must be handled with adult supervision.

ADDITIONAL WARNINGS:

1. Staring directly at the scoreboard display at close range for long periods of time may cause eye strain or eye damage.
2. Close proximity to the horn while it is sounding may cause hearing loss or damage. Make certain everyone maintains a safe distance whenever the horn is sounded.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

Thank you for purchasing our Funtronix Score-N-Time™ Wireless Referee Wrist Remote Control Keypad. At Funtronix, our motto is “Electronic Fun for Everyone”. By offering a line of affordable electronic scoreboard products, our goal is to add a little fun to your sports and leisure activities.

Before using your scoreboard with the wrist keypad, please read the following precautions. Doing so will reward you with many years of enjoyment with your new wrist keypad. Failure to follow them may cause bodily harm or may damage the wrist keypad beyond the terms of the warranty.

1. **DO NOT** expose the wrist keypad to rain or other condensed moisture.
2. **DO NOT** store the wrist keypad in direct sunlight for extended periods of time.
3. **Do NOT** use abrasives or spray cleaning solutions on the wrist keypad. See Section 4 for care and maintenance.


TABLE OF CONTENTS

| SECTION | DESCRIPTION | PAGE |
|---------|---|------|
| 1 | Charging your Wrist Remote Keypad Battery | 3 |
| 2 | Pairing your scoreboard and Wrist Remote keypad | 4 |
| 3 | Detailed keypad button descriptions | 5 |
| 4 | Care and maintenance | 5 |

SECTION 1 CHARGING YOUR WRIST REMOTE KEYPAD BATTERY

The wrist remote keypad contains a rechargeable battery. While the charge of the wrist remote keypad battery will typically last between 1 to 2 weeks (depending on usage), we recommend charging your wrist remote keypad the night before each use of the scoreboard.

The charging indicator will light up to indicate the wrist remote keypad is charging. The light will turn off once the battery is fully charged.

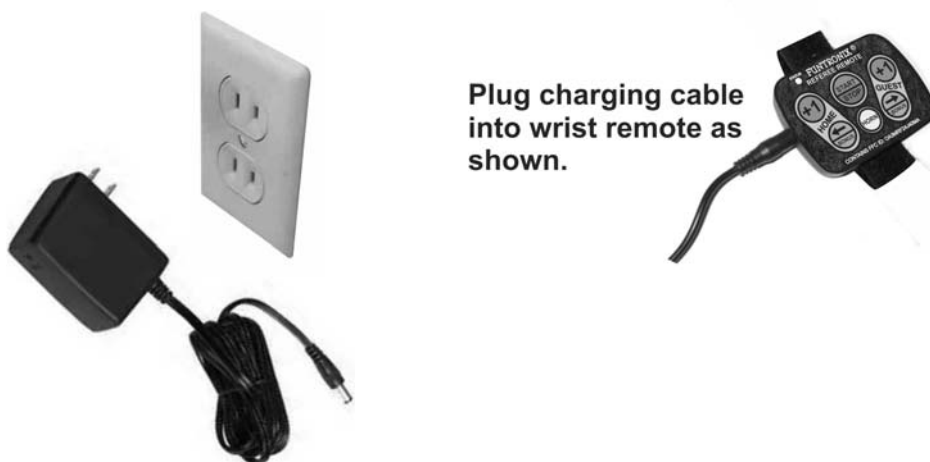

SECTION 2 PAIRING YOUR SCOREBOARD AND WRIST KEYPAD

Follow the steps below to link your wireless wrist remote keypad to your scoreboard.

1. Make sure your main keypad and scoreboard are already paired and working properly together before proceeding to the next step. Follow the steps in your scoreboard owner's manual for details of how to link your main keypad and scoreboard if needed.
2. On your main wireless keypad that came with your scoreboard, press and hold the "REF LINK" button for approximately 10 seconds, until you see the period digit on the scoreboard showing a rotating pattern.



3. Press and hold the wrist remote keypad's button for approximately 5 seconds, or until the wrist keypad emits a single beep.

NOTE: If you wait more than 20 seconds between Step 2 and Step 3 the scoreboard will automatically cancel the ref link function and return to its normal display. If this happens, start the pairing process again from Step 2.


4. After a couple seconds the scoreboard should return to its normal display and the wrist keypad will emit two quick beeps indicating it has paired with the scoreboard.

IMPORTANT NOTES:



1. ***Pressing and holding the button down for more than 3 seconds will cause the wrist remote connection to the scoreboard to be deleted. Always release this button within 1 second after pressing it.***
 2. ***Users of the tethered sit-behind remote control: Turning the scoreboard on with the sit-behind keypad disconnected will cause the scoreboard to delete its connection to the wrist remote. Repeat Section 2 to restore the connection. To prevent this from happening, always plug the sit-behind keypad into the scoreboard prior to turning the scoreboard on.***
-

SECTION 3: DETAILED KEYPAD BUTTON DESCRIPTIONS

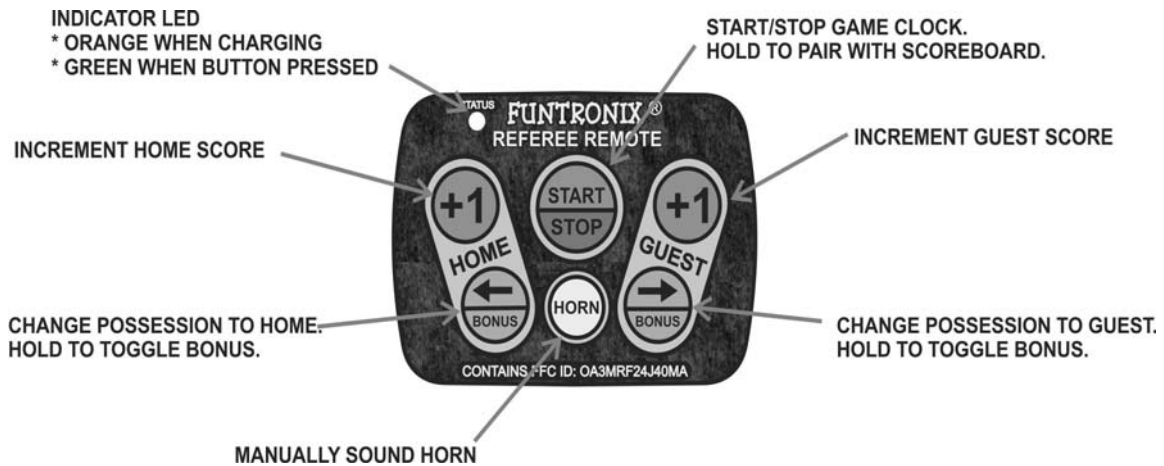

SECTION 4: CARE AND MAINTENANCE

Keep your scoreboard clean for optimum viewing of the display.

- Never spray cleaning solutions directly onto the wrist keypad.
- Use only ammonia-free window cleaning solution sprayed onto a cloth wipe.

To remove the elastic wrist band for cleaning, stretch the band and pull it away from one of the two retaining clips on the back-side of the wrist remote keypad.

To re-attach the elastic wrist band:

1. Stretch the band and tuck it under one of the two retaining clips. See figure 4a.
2. With the band stretched, tuck the other edge of the band under the second retaining clip. You may need to pull on one end of the band to help feed it into the second clip. See figure 4b.



Figure 4a



Figure 4b

Please visit our website for new products and accessories for your scoreboard:

www.funtronixonline.com



Funtronix LLC
29834 N. Cave Creek Rd
Suite 118-273
Cave Creek, AZ 85331
email: sales@funtronixonline.com